



ALL MODELS FEATURES

Free automatic updates.

Free app for iOS and Android.

You can check information from browser too.

FLEET function: it allows you to manage multiple boats.

On the website you will see all the boats simultaneously by using the tracking command.

MOORING function: here you can indicate a specific area, and if the boat goes out from this area, you will receive an alarm notification.

ROUTES function: it allows you to view the routes in different ways, for example single route, multiple route, multi-day route.

It also has the possibility to see date, hour, position and speed all along the route.

The history of the routes traveled can be consulted at any time.

Battery voltage control: you receive an alarm notification in case the battery is disconnected or the voltage is higher or lower than the one set on the control panel.

Serial line input: to interface the boat's home automation and much more.



New Steward Basic

In addition to the facilities common to all models: 1 digital alarm - 1 analogue input for control of the battery

SATELLITE GEOLOCATION

Steward is a, sophisticated but simple to use, satellite tracking device which allows to monitor your boat 24/7.

You will receive alarm notifications, information on on-board devices, accesses or unauthorized transfers from the app and by e-mail.

Outboard Steward



L 110 P 81 H 41 mm



L 78 P 54 H 40 mm

This device is available in two different dimensions: New Steward for 40 hp outboard engines, and Mini Steward for smaller outboard engines.


In addition to the features already described for all models, Outboard Steward devices have:

- 1 digital alarm;
- 1 analogue input for battery check;
- battery disconnection alarm in the event of a motor removal;
- alarm notification in the event the engine leaves the mooring area;
- possibility to activate a timed on-board siren in the event of an alarm;
- tracking of the engine position when it is no longer powered by the boat battery.



New Steward

In addition to the features already described, New Steward has:

- 9 digital alarms;
- 7 analogue inputs;
- 2 digital outputs to drive 2 relays 12/24V.

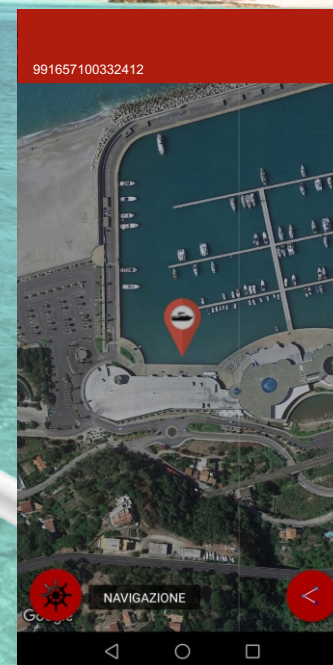


There are different ways to display routes depending on the boat function.
By clicking on a point of the route, you will see relative information.

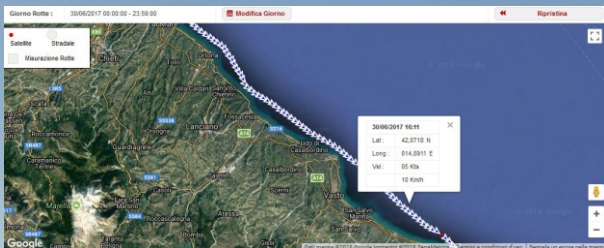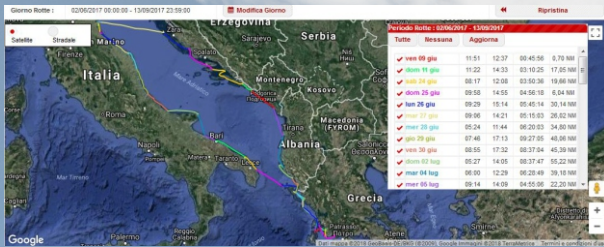

Thanks to the tracking function on the website, you know the exact position of every boat in your fleet.
You also see position, speed and battery voltage about the boats that are moving.
The tracking function is also available for groups of boats belonging to the same Association.

 The use of these devices requires an annual or seasonal subscription with full European coverage that includes Albania, Montenegro, Turkey and Malta

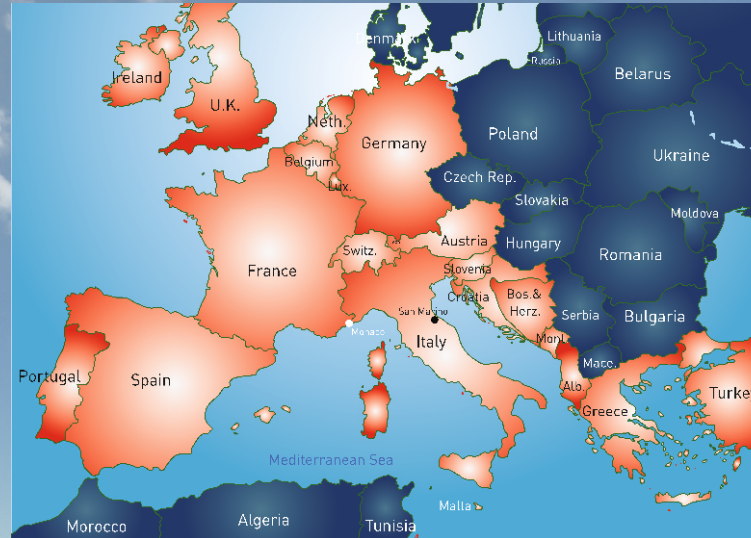

NEW GENERATION

GPS tracking device

STEWARD



Sunair Tecnologia di Fazio Giuseppe
via Grigna, 7
20882 Bellusco (MB)
tel : +39 392 7881929

Rivenditore autorizzato:

Authorized dealer:

sito: www.sunairtecnology.it

e-mail: info.steward@sunairtecnology.it

Your personal assistant

